

## HHMPI, Interface Cables &amp; Accessories

Flight Recorder P/N	HHMPI & Cable P/N	Description
N/A	<b>FDS40-0104</b>	Multi Purpose Interface (MPI V3 Civil Variant)
N/A	<b>FDS40-0301</b>	Hand Held Multi-Purpose Interface (HHMPI) Kit *Includes HHMPI Cradle
N/A	<b>FDS40-5102</b>	HHMPI Engineering Unit conversion software
N/A	<b>FDS40-0331</b>	HHMPI PCMCIA Assembly
N/A	<b>FDS40-0332</b>	Wireless Capability Option
N/A	<b>FDS40-0373</b>	HHMPI Docking Cradle
<b>Honeywell UFDR</b> 980-4100-xxx	<b>FDS40-0204</b>	Honeywell DFDR (Sunstrand DFDR) UFDR, Interface Cable
	<b>FDS40-0275</b>	Honeywell AR FDR Interface Cable (45 foot length)
<b>Honeywell SSFDR</b> 980-4120-xxx 980-4700-xxx	<b>FDS40-0203</b>	Honeywell SSFDR Interface Cable
<b>Honeywell (SRVIVR)</b> 980-4131-xxx LW FDR 980-6050-xxx LW CVR 980-6044-XXX (LW CVDR)	<b>FDS40-0210</b>	Honeywell Light Weight (AR HFR5) Interface cable. Requires on-aircraft CVR download cable for insitu downloads
<b>Honeywell SSFDR</b> 980-4710-00X	<b>FDS40-0208</b>	Honeywell AR Series FDR Interface Cable
<b>Honeywell HFR5-D</b> 980-4750-009	<b>FDS40-0232</b>	Honeywell HFR5-D Interface Cable
<b>Honeywell HFR5-V CVR</b> 980-6032-001	<b>FDS40-0274</b>	Honeywell HFR5-V Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>Honeywell SSCVR</b> 980-6020-xxx 980-6022-xxx	<b>FDS40-0216</b>	Honeywell CVR Download and Power, Interface Cable (On-bench)
<b>Honeywell DVDR</b> 980-6025-001 (DVDR)	<b>FDS40-0227</b>	Honeywell DVDR, Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>Lockheed</b> 10077A500-803 FDR (L209)	<b>FDS40-0205</b>	Lockheed L209/Plessey 1584 Interface Cable
<b>L3 Comm QAR</b>	<b>FDS40-0241</b>	L3 Comm USB Cable
<b>L3 Comm F1000 SSFDR</b> S603, S703, S800, S903	<b>FDS40-0201</b>	L3 Comm. F1000, SSFDR Interface Cable
<b>L3 Comm FDR, CVR, CVDR</b> FA2100 / FA2200 / FA2300	<b>FDS40-0202</b>	L3 Comm. FA2100 CVDR Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>L3 Comm SRVIVR</b> 1493100-1XXXX CVR 1493100-2XXXX FDR 1493100-3XXX CVDR	<b>FDS40-0209</b>	L3 Comm. SRVIVR Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>L3 Comm FDR &amp; CVR</b> FA5000 FDR & CVR	<b>FDS40-0223</b>	L3 Com. FA5000 Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>Universal</b> 1607 FDR 1606 CVR 1605 CVDR	<b>FDS40-0224</b>	UASC CVFDR Interface Cable. Requires on-aircraft CVR download cable for insitu downloads
<b>BASE</b> MCR500-xxx / SCR 500-xxx	<b>FDS40-0212</b>	BAe MCR500 Interface Cable
<b>Penny &amp; Giles MPFR</b> D51615-XXX	<b>FDS40-0271</b>	MPFR Bench Download Cable
<b>Penny &amp; Giles 91005 (B&amp;D/Spirent)D51615-XXX</b>	<b>FDS40-0270</b>	B&D (Spirent) Interface Cable

## On-Aircraft CVR Download Cables For CVR

Flight Recorder P/N	Interface P/N	Description
<b>Honeywell SSCVR</b> 980-6020-XXX 980-6022-XXX	<b>FDS40-0215</b>	Honeywell CVR Rack Adaptor (On-aircraft)
<b>Honeywell AR</b> 980-6021-032 CVR 980-6021-066 CVR 980-6021-072 CVFDR 980-6021-083 CVFDR	<b>FDS40-0246</b>	Honeywell AR Series CVR/Combi Interface Cable (On-Aircraft)
<b>Honeywell HFR5-V CVR</b> 980-6032-001	<b>FDS40-0247</b>	ARINC-757 CVR Rack Adaptor. (L3 FA2100 and Honeywell HFR5-V CVR Aircraft Rack Adapter. On-Aircraft)
<b>Honeywell SRVIVR</b> 980-6050-xxx (LW CVR) 980-6044-XXX (LW CVDR)	<b>FDS40-0259</b>	Honeywell LW/SRVIVR CVR Power Cable (On-Aircraft)
<b>L-3 Comm</b> FA2100 CVR & CVDR FA2300 CVDR	<b>FDS40-0247</b>	ARINC-757 CVR Rack Adaptor. (L3 FA2100 and Honeywell HFR5-V CVR Aircraft Rack Adapter. On-Aircraft)
<b>L3 Comm FDR &amp; CVR</b> FA5000 FDR & CVR.	<b>FDS40-0247</b>	ARINC-757 CVR Rack Adaptor. (L3 FA2100 and Honeywell HFR5-V CVR Aircraft Rack Adapter. On-Aircraft)
<b>L-3 SRVIVR</b> 1493100-1XXX 1493199-3XXX	<b>FDS40-0260</b>	L3 Com SRVIVR CVR Power Cable (On-Aircraft)
<b>Universal</b> 1605 CVDR 1606 CVR	<b>FDS40-0258 (Power)</b>	UASC 1605 1606 series CVR Download Power Cable (On-Aircraft)