



www.avionteq.com

REVISED: 3/13/2014 P/N	DESCRIPTION	INFORMATION	AB-212 PT6T-3,-3B	AB-212 / AB-412 PT6T-6	B-206B,-L RR250C20,-C28	SHORT 330 PT6A-45R	FOKKER 50 PW125B	PT6A-	BEECH 1900D PT6A-67
TESTER									
H337NP-207	ENGINE TESTER <NOTE 2>	115VAC / 230VAC / 28VDC	1	1	1	1	1	1	1
ENGINE RUN	(H338) (Use w/JETCAL® ANALYZER & ENGINE TESTER								
BH12122	HOSE PRESSURE	PT7							
BH15572-1	RPM CABLE ADPTR	N1/N2 () TO BH485B							
BH18627	SIGNAL CABLE	BH18628 TO TESTER							
BH18628	TEMP CABLE ADPTR	ENG T/C TO BH18627							
BH18629	TEMP CABLE CHECK ADPTR	ENG TO BH18627							
BH18630	INSULATION CHECK ADPTR	ENG TO BH18627							
BH19030J	TEMP CABLE	AIRCRAFT HARNESS TO TESTER							
BH21621	TORQUE CABLE	TRANSDUCER TO TESTER	1	1	1	1		1	1
BH21623A	TEMP CABLE ADPTR	ENG T/C BLOCK TO TESTER (STATIC / DYNAMIC)	1	1	1	1		1	1
BH21623L-75	TEMP CABLE	ENG T/C BLOCK TO TESTER (DYNAMIC)					1		
BH21745-30	RPM CABLE	N1/N2 IND TO TESTER						1	
BH21750	TORQUE ADPTR	TORQUE XMITTER SPACER (PW PT6)				1		1	1
BH21793A	TORQUE HOSE ASSY	PRESS &/OR VENT (#4AN TEE)	2	2	1	2		2	2
BH21793A-4	TORQUE HOSE ASSY	PRESS (#3AN TEE w/ HOSE)			1				
BH21793A-5	TORQUE HOSE ASSY	PRESS (#3AN TEE)							
BH22196-1	RPM CABLE	N1 IND TO TESTER							
BH22834E-30	RPM CABLE	N1/N2 TAK GEN TO TESTER	1	1		1		1	1
BH22834G-30	N1/N2 SIGNAL CABLE	TAK GEN TO TESTER			1				
BH23318-16	RPM CABLE ADPTR	N1 IND TO BH485B							
BH23318-17	RPM CABLE ADPTR	N2 IND TO BH485B							
BH23493-15	IND. CHECK CABLE	EGT IND (NULL BAL) TO BH27998							
BH23493A-6	IND. CHECK CABLE	TEMP IND TO BH27998							
BH25000B-28	DC POWER CABLE								
BH25000F-28	DC POWER CABLE						1		
BH25186	RPM CABLE	NG/NP/NR IND TO TESTER							
BH25187-2	NP/NR RPM ADPTR	NP/NR IND TO BH25186							
BH25917B-70	TORQUE CABLE	EEC TO TESTER					1		
BH25919-70	RPM CABLE	N1/N2/NPT TAK GEN TO TESTER					1		
BH27034G	DC POWER CABLE								
BH27038	RPM CABLE	NG/NF/NR IND TO TESTER							
BH27066	RPM CABLE	N1/N2 IND TO TESTER							
BH27099A	RPM CABLE	N1/N2/NR IND TO TESTER							
BH27388-1	N2 RPM ADPTR	ENG 1 N2 IND TO BH27066							
BH27388-2	N2 RPM ADPTR	ENG 2 N2 IND TO BH27066							
BH27845	TORQUE CABLE	TORQUE IND TO TESTER							
BH27899C	TEMP CABLE	PTTT IND TO TESTER (DYNAMIC)							
BH27899D	IND. CHECK CABLE	PTTT IND TO TESTER (STATIC)							
BH27995	TEMP CABLE	BH27998 TO TESTER			1			1	1
BH27996	TEMP ADAPTR	D'ARSONVAL IND TO BH27998			1			1	1
BH27997	TEMP CABLE	BH27998 TO TESTER							
BH27998	TEMP RELAY BOX				1			1	1
BH28586	TEMP CABLE COMPENSATOR (ITT/EGT IN)	TEMP COMPENSATOR TO TESTER (ENG T/C SIDE)	1	1					
BH28599	TEMP CABLE COMPENSATOR (ITT/EGT OUT)	TEMP COMPENSATOR TO TESTER (IND SIDE)	1	1					
BH30885A-1	TORQUE TRANSDUCER	0-50 PSIA ABSOLUTE							
BH30885D-1	TORQUE TRANSDUCER	0-100 PSID DIFFERENTIAL	1	1		1		1	1
BH30885G-1	TORQUE TRANSDUCER	0-100 PSIG GAUGE			1				
BH485B	RPM EXTENSION CABLE	BH15572-1 TO TESTER							
BH820	RPM CABLE	RPM IND TO TESTER							
BH907-25	RPM CABLE	TAK GEN TO TESTER							
H326-1	CASE ACCESSORY	SEE NOTE 2	1	1	1	1	1	1	1